# WORKS

Keypads

# Installation Instructions Please Read Before Installing


### Overview

 
grammed with a personal with HomeWorks systems. and -7B keypads are for use computer using the The keypad buttons are pro--3BRL, -4B, -4FS, -4S, -4SIR, -5B, -5FS, -5BRL, -6B, -6BRL, The STRD-1B, -2B, -3B, HomeWorks Utility.

assigned to each HomeWorks unique address, can be

 
STRD-1B, -2B, -3B, -3BRL, -4B, -4FS, -4S, -4SIR, -5B, -5FS, -5BRL, -6B, -6BRL, -7B 120 V ~, 50/60 Hz, 0.2 A ÒÒÒ

### RF Processor. Up to 32 keypads, each with a

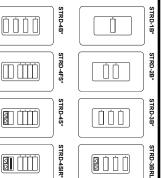







## Wallplate/Adapter purchased separately.

## **Important Notes**

Codes: Install in accordance with all local and national electrical codes.



Note: DO NOT use non-Lutron wallplates with these

only. **Environment:** Ambient operating temperature: 0-40°C, 32-104°F, 0-90% humidity, non-condensing. Indoor use

ommended for best color match and clean aesthetic appear-Wallplates: Lutron Claro® and Satin Colors™ wallplates are recance. Do not paint controls or wallplates.

Cleaning: To clean, wipe with a clean damp cloth. DO NOT use any chemical cleaning solutions

wallboxes for easier installation. Wallboxes: Lutron recommends using 3-1/2 in. (89 mm) deep

**RF Device Placement:** RF Keypads must be located within 30 ft. (9 m) of an RF Signal Repeater or an RF Processor.

grammed using the HomeWorks Utility RF Keypads will not function until they are addressed and pro-

# Designer-style RF seeTouch™ Installation

1. Turn power OFF at fusebox or circuit breaker.

in the OFF position before proceeding. Wiring with power ON may result in personal injury. Danger - Locate and remove fuse or lock circuit breaker

suitable for copper wire only. Prepare wires. When making wire connections, follow the recommended strip lengths and combinations for the supplied wire connectors. Note: Wire connectors provided are

### Small:

Strip insulation 1/2 in. (13 mm) for Strip insulation 3/8 in. (10 mm) for 14 AWG (2.5 mm²). 16 AWG (1.5 mm<sup>2</sup>)



- ტ screws appropriately.
- 4. Push all wires back into the wallbox and loosely fasten the control to the wallbox using the keypad mounting screws provided. Do not pinch the wires.
- Attach Lutron Claro or Satin Colors wallplate adapter and wallplate.

ပ်၊

- a. Loosely install keypad mounting screws.
- b. Tighten wallplate adapter mounting screws snug
- Tighten keypad mounting screws until wallplate adapter is flush to wall (do not over-tighten).


ဂ

- ٩ Snap wallplate onto wallplate adapter, and verify that buttons are not submerged.
- e. If buttons are submerged, loosen keypad mounting
- Restore power.




## 3. Wiring: See Wiring Diagram. or 18 AWG (1.0 mm<sup>2</sup>) control wire. Use to join one 14 AWG supply wire with one 16

# **Mounting Diagram**

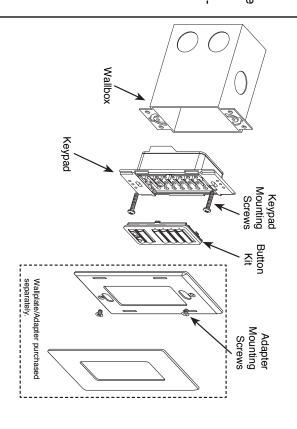

## Wiring Diagram

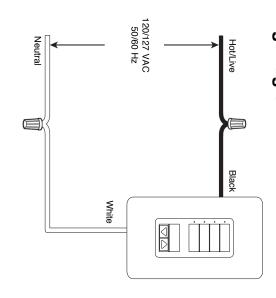

# **Troubleshooting Guide**

RF Keypads will not function until they are addressed and programmed using the HomeWorks Utility.

Symptom	Cause and Action
LEDs don't light up when buttons are	Power not present at keypad
pressed.	Circuit breaker OFF. Turn ON breaker.
	<ul> <li>Wiring error. Check wiring to be sure it agrees with installation instructions.</li> </ul>
Button presses on keypad cause the key-	Keypad has not been addressed.
pad to <i>quickly</i> flash all its LEDs simultane- ously.	<ul> <li>Address the keypads using the HomeWorks Utility.</li> </ul>
Button presses on keypad cause the keypad to slowly flash all its LEDs simultane-	Keypad has an address, but has not had programming uploaded.
ously.	<ul> <li>Upload to the system using the HomeWorks Utility.</li> </ul>
Keypad cannot be addressed.	Keypad is out of RF communications range.
	<ul> <li>Move RF Signal Repeater or RF Processor to within 30 feet (9 m) of key- pad.</li> </ul>
LEDs light when button is pressed, but the	Improper programming
System response is not connect.	<ul> <li>Check programming in HomeWorks Utility.</li> </ul>

Technical and Sales Assistance
If you need assistance, call the toll-free Lutron
Technical Support Center. Please provide exact
model number when calling,
(800) 523-9466 (U.S.A., Canada and the Caribbean)
Other countries call:
Tel:
(610) 282-3890
Visit our Web site at www.lutron.com

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a rest-dential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed in accordance with the instructions, may cause harmful interference to radio continuous expectation, which can be determined by furning the equipment does cause harmful interference to radio or television reception, which can be determined by furning the equipment of and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the septeration between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by Lutron Electronics Co. could void the user's authority to operate this equipment.

### LIMITED WARRANTY

Lutron will, all sopion, regard or replace any unit that is defective in materials or manufacture within two years after purchase. For warranty service, return unit to place of purchase or mail to Lutron at 7200 Suter Rtd., Coopesburg. Pt 18029-1729, postage pre-paid. Telephone the Lutron Technical Support Center to life feet at 060-252-3468. After the two year period, p. At 18029-1729, postage pre-paid. Telephone the Lutron Technical Support Center to life feet at 060-252-3468. After the two year period, p. At 18029-1729, postage pre-paid. Telephone the Lutron Reports of the purchase. For more information regarding this warranty contact your Lutron representative.

THIS WARRANTY IS IN LIFE LOP ALL OTHER EXPRESS WARRANTES, AND THE IMPLIED WARRANTY OF MERCHANYABILITY IS LIMITED TO TWO YEARS FROM PURCHASE. THIS WARRANTY DOES NOT COVER NOIDERTIAL COST OF INSTALLATION, REGINATION, THE WARRANTY DOES NOT COVER NOIDERTIAL OF ROST OF INSTALLATION, EMMOVAL OR REIN-STALLATION, TO ANY CLAM FOR DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE MANUFACTURE, SALE, INSTALLATION, BEILITY ON ANY CLAM FOR DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE MANUFACTURE, SALE, INSTALLATION, BELITY ON ANY CLAM FOR SUBJECT OF THE WARRANTY OF RESPONSIBLE OF THE WARRANTY OF MERCHANTY OF THE WARRANTY OF SUBJECT OF THE WARRANTY OF THE WARRANTY OF THE WARRANTY OF SUBJECT OF THE WARRANTY OF THE

