 
Installation Instructions Please Read Before Installing

 
Overview

 
programmed with a personal NBIR-NONE keypads are for HomeWorks Utility computer using the use with HomeWorks systems. The keypad buttons are The STR-NB-NONE and STR

 
assigned to each HomeWorks unique address, can be RF Processor. Up to 32 keypads, each with a

 
STR-NB-NONE, STR-NBIR-NONE 120 V~, 50/60 Hz, 0.2 A STR-NB-NONE STR-NBIR-NONE











Designer-style RF seeTouch™ Installation

1. Turn power OFF at fusebox or circuit breaker.

in the OFF position before proceeding. Wiring with power ON may result in personal injury. Danger - Locate and remove fuse or lock circuit breaker

suitable for copper wire only. Prepare wires. When making wire connections, follow the recommended strip lengths and combinations for the supplied wire connectors. Note: Wire connectors provided are

Small:

Use to join one 14 AWG supply wire with one 16 16 AWG (1.5 mm²). Strip insulation 1/2 in. (13 mm) for Strip insulation 3/8 in. (10 mm) for 14 AWG (2.5 mm²).



3. Wiring: See Wiring Diagram

or 18 AWG (1.0 mm²) control wire.

LEDs light when button is pressed, but the system response is not correct.

Improper programming

Check programming in HomeWorks

Keypad cannot be addressed.

Keypad is out of RF communications range.

Processor to within 30 feet (9 m) of key-Move RF Signal Repeater or RF Upload to the system using the *HomeWorks* Utility.

4. Push all wires back into the wallbox and loosely fasten the vided. Do not pinch the wires control to the wallbox using the keypad mounting screws pro-

Install Button Kit.

wallplate. Attach Lutron Claro or Satin Colors wallplate adapter and

Troubleshooting Guide

grammed using the HomeWorks Utility.

LEDs don't light up when buttons are

Power not present at keypad Cause and Action

· Circuit breaker OFF. Turn ON breaker.

Wiring error. Check wiring to be sure it agrees with installation instructions.

RF Keypads will not function until they are addressed and pro-

- a. Loosely install keypad mounting screws
- b. Tighten wallplate adapter mounting screws snug
- <u>a</u> Tighten keypad mounting screws until wallplate adapter is flush to wall (do not over-tighten)
- e. If buttons are submerged, loosen keypad mounting Snap wallplate onto wallplate adapter, and verify that buttons are not submerged. screws appropriately.

Button presses on keypad cause the keypad to quickly flash all its LEDs simultane-

Keypad has not been addressed.

Button presses on keypad cause the key-pad to slowly flash all its LEDs simultane-

programming uploaded

Keypad has an address, but has not had

Address the keypads using the *HomeWorks* Utility.

 
Restore power.

Mounting Diagram

Keypad Mounting Screws

Button Kit

Adapter Mounting Screws



xxx-xx-x) for proper operation. Colors_™ wallplates are recomsee Touch Button Kit (SKDused in conjunction with a Lutron Claro® and Satin RF Keypads will not function HomeWorks Utility

buttons or wallplates. ance. Do not paint controls, and clean aesthetic appearmended for best color match

use any chemical cleaning a clean damp cloth. DO NOT Cleaning: To clean, wipe with

Codes: Install in accordance

Important Notes

with all local and national

electrical codes.

mends using 3-1/2 in. easier installation. Wallboxes: Lutron recom-(89 mm) deep wallboxes for

ating temperature: 0-40°C, 32-104°F, 0-90%

Environment: Ambient oper-

humidity, non-condensing.

Indoor use only.

RF Device Placement: RF


until they are addressed and programmed using the

Wallbox

Keypad

Button Kit and Wallplate/Adapter purchased separately.

Wiring Diagram

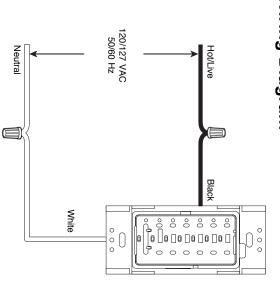

Technical and Sales Assistance
If you need assistance, call the tol-free Lutron
Technical Support Center, Please provide exact
model number when calling,
(800) 523-9466 (U.S.A., Canada and the Caribbean)
Other countries call:
Tel: (610) 282-3800
Tel: (610) 282-3800

Tel: (610) 282-3800 Fax: (610) 282-3090 Visit our Web site at www.lutron.com

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a resternal interference with the instructions, may cause harmful interference to radio containce with the instructions, may cause harmful interference to radio conmunications. However, there is no guarantie that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by furning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving anterina.

- Increase the separation between the equipment and receiver.

- Consult the dealer or an experienced radio/TV technician for help.

- Consult the dealer or an experienced radio/TV technician for help.

- Caution: Changes or modifications not expressly approved by Lutron Electronics Co. could void the user's authority to operate this equipment.

LIMITED WARRANTY

Lutron will, all to picon, replace any unit that is defective in materials or manufacture within two years after purchase. For warranty service, return unit to place of purchase or mail to Lutron at 7200 Suter Pat, Coopersturg, PA 18039-1299, postage pre-paid. Telephone the Lutron Technical Support Center to the eat 800-522-9486. After the two year period, a pro-rated warranty applies to this product unit eight years after the purchase. For more information regarding this warranty contact your Lutron representative.

THIS WARRANTYS IN LIEU OF ALL OTHER EXPRESS WARRANTY DES NOT COVER THE COST OF INSTALLATION, REMOVAL OR REIN STALLATION, OR DAMAGE RESULTING FROM MISUSE, ABUSE, COMENTO PER BOR INCORRECT REPAIR, OR DAMAGE FROM MIPROPOPER WIRING OR INSTALLATION, THIS WARRANTY DES NOT COVER THE COST OF INSTALLATION, REMOVAL OR REIN STALLATION, THIS WARRANTY SOLES NOT COVER THE COST OF INSTALLATION, REMOVAL OR REIN STALLATION, THIS WARRANTY SOLES NOT COVER THE COST OF INSTALLATION, REMOVAL OR REIN STALLATION, THIS WARRANTY SOLES NOT COVER THE COST OF INSTALLATION, REMOVAL OR REIN STALLATION, THIS WARRANTY SOLES NOT COVER THE COST OF INSTALLATION, THE WARRANTY SOLES NOT COVER THE COST OF INSTALLATION, REMOVAL OR REIN STALLATION, THIS WARRANTY SOLES ARISING OUT OF OR IN CONNECTION WITH THE MANUFACTURE, SALE, INSTALLATION, BELLYPRY OR USE OF THE UNIT SHALL ALVER EXCEED THE PURCHASE PROCE OF THE UNIT.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state Some states do not allow the acclusion or imitations only not apply to you.

Some states do not allow the acclusion or imitation or consequential damages, so the above limitation may not apply to you.

Some states do not allow the acclusion or limitation of incidental or consequential damages, so the above imitation or or colusion may not apply to you.

Some states do not allow the acclusion or limitation or process of the process of the state of the process of the process of the process of the process of the pro

